


## Artist Vibraphone


### V7530G/S

### Spare Part Manual

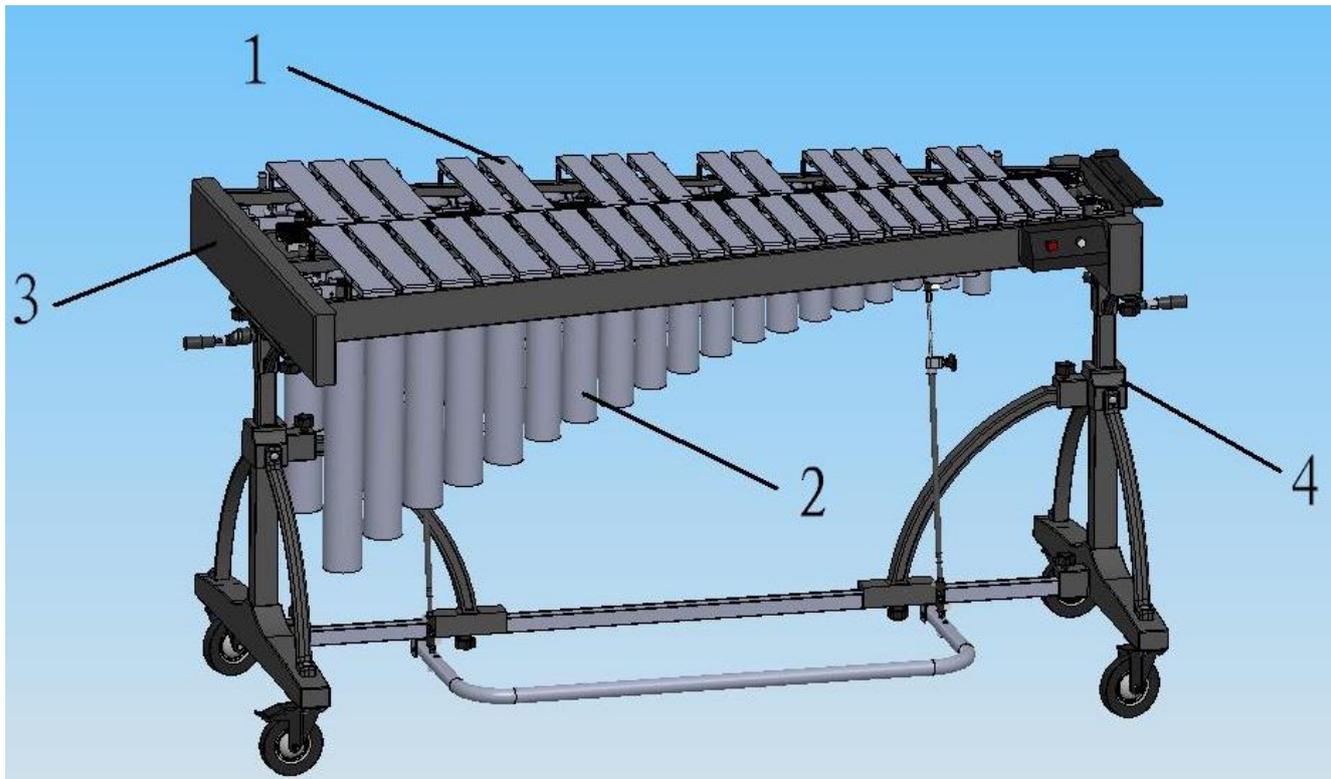

Item	Part No	Description
1	PBV7530-AGAA PBV7530-AAA	V7530G Tone BarSet (incl. Cords, Springs & Packaging) V7530S Tone BarSet (incl. Cords, Springs & Packaging)
2	PRV7530A-A01GZ PRV7530A-A01SL	V7530G Resonator Sets (Incl. Packaging) (不含外箱) V7530S Resonator Sets (Incl. Packaging) (不含外箱)
3	<b>PFV7530-AAA</b>	V7530 Frame (Incl. all hardware & packaging)
4	PLX6535-002A	V7530 Leg Assembly (Incl. Packaging, no cross rail)

# 1. V7530G/S Tone Bar Set

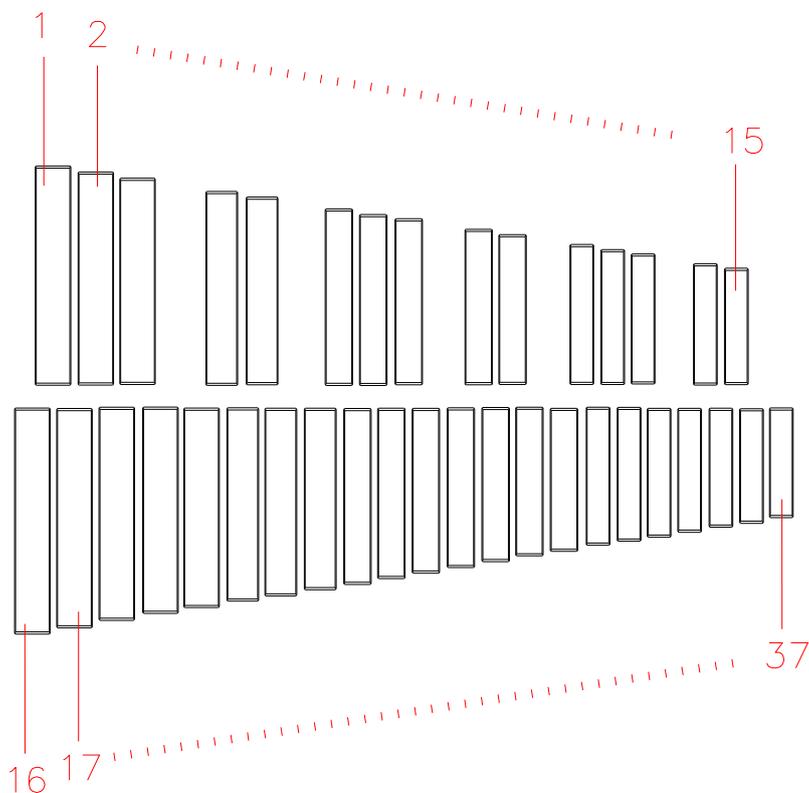

PBV7530-A53FG



無表示銀色音板 ; **G** 表示金色音板

Item	Notes	Part No.
1	F#3	PBV7530-A53F
2	G#3	PBV7530-A53G
3	A#3	PBV7530-A53A
4	C#4	PBV7530-A54C
5	D#4	PBV7530-A54D
6	F#4	PBV7530-A54F
7	G#4	PBV7530-A54G
8	A#4	PBV7530-A54A
9	C#5	PBV7530-A55C
10	D#5	PBV7530-A55D
11	F#5	PBV7530-A55F


Item	Notes	Part No.
20	C4	PBV7530-A04C
21	D4	PBV7530-A04D
22	E4	PBV7530-A04E
23	F4	PBV7530-A04F
24	G4	PBV7530-A04G
25	A4	PBV7530-A04A
26	B4	PBV7530-A04B
27	C5	PBV7530-A05C
28	D5	PBV7530-A05D
29	E5	PBV7530-A05E
30	F5	PBV7530-A05F




12	G#5	PBV7530-A55G	31	G5	PBV7530-A05G
13	A#5	PBV7530-A55A	32	A5	PBV7530-A05A
14	C#6	PBV7530-A56C	33	B5	PBV7530-A05B
15	D#6	PBV7530-A56D	34	C6	PBV7530-A06C
16	F3	PBV7530-A03F	35	D6	PBV7530-A06D
17	G3	PBV7530-A03G	36	E6	PBV7530-A06E
18	A3	PBV7530-A03A	37	F6	PBV7530-A06F
19	B3	PBV7530-A03B			

Item	Part No.	Description
	PBV7530-156A	Tone Bar Cord & Springs Replacement package

## 2.V7530G/S Resonators

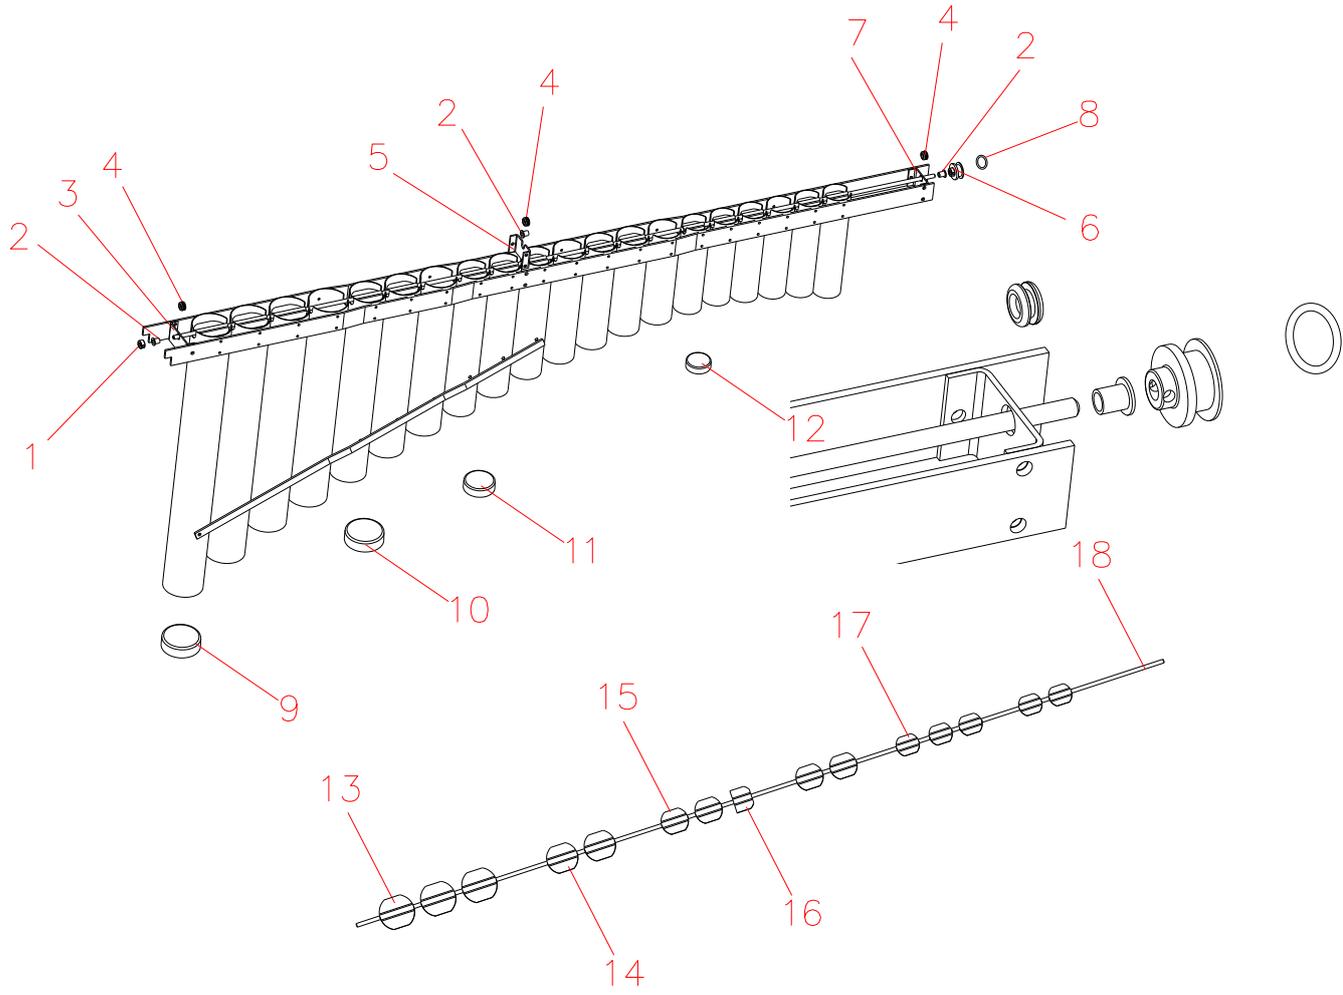



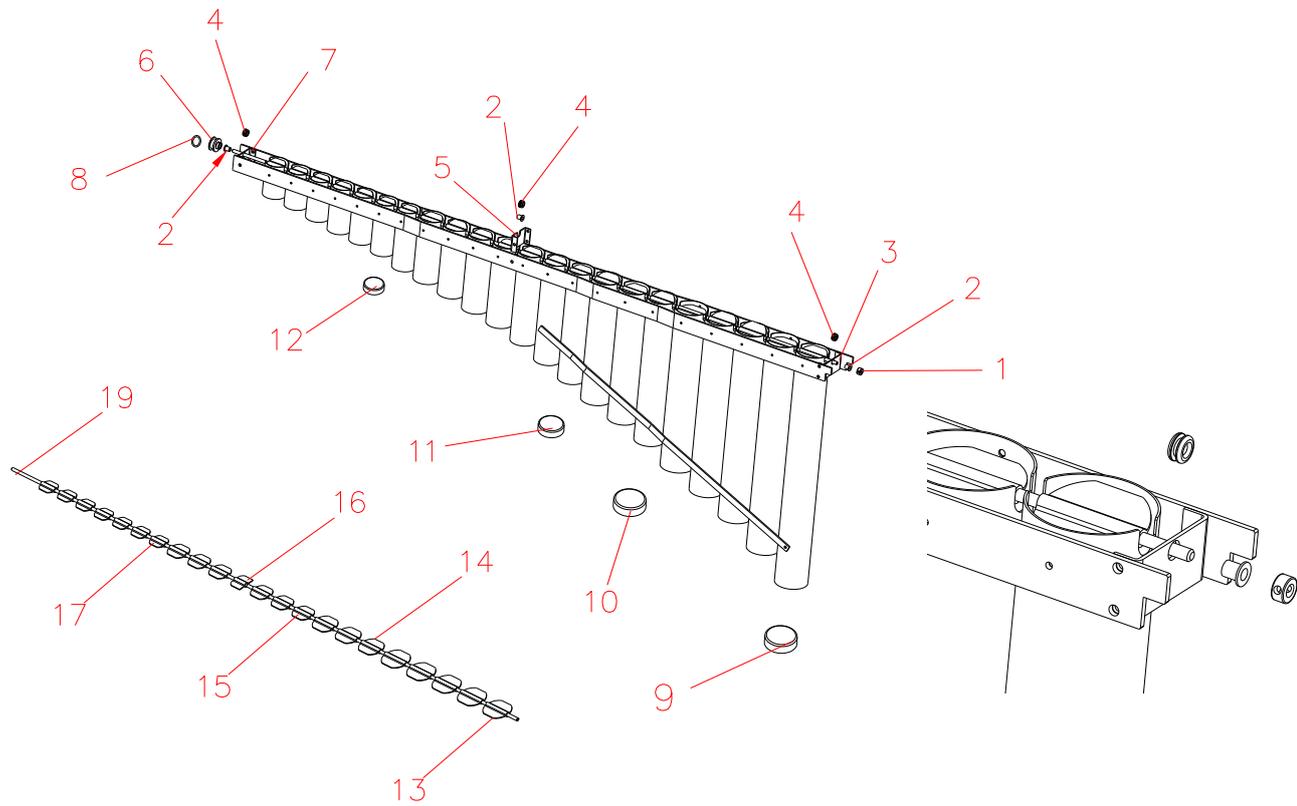


Item	Part No.	Description
	PRV7530AQ-AGN	V7530G Resonator Naturals (Gold)
	PRV7530AB-AGN	V7530G Resonator Accidentals (Gold)
	PRV7530AQ-ABN	V7530S Resonator Naturals (Silver)
	PRV7530AB-ABN	V7530S Resonator Accidentals (Silver)
1	PRV7530-020	共鸣管活页转轴间座
2	PMP26-265	Rubber Bush
3	PR715-A041B	Mount Plate
4	PRV6530-240	Rubber Bush
5	PRV7530-A041B	Mount Plate
6	PRV7530-548	Pulley
7	PR715-A040B	Mount Plate
8	PRV6530-818	O Ring
9	PR420-601	Resonator Cap
10	PR415-602	Resonator Cap
11	PR415-601	Resonator Cap
12	PR320-601	Resonator Cap
13	PRV7530-307	Leaf Blades
14	PRV7530-306	Leaf Blades

15	PRV7530-304	Leaf Blades
16	PRV7530-305	Leaf Blades
17	PRV7530-303	Leaf Blades
18	PRV7530B-300	Binder Rotating Shaft Axis
19	PRV7530Q-301	Binder Rotating Shaft Axis

### 3. V7530G/S Frame

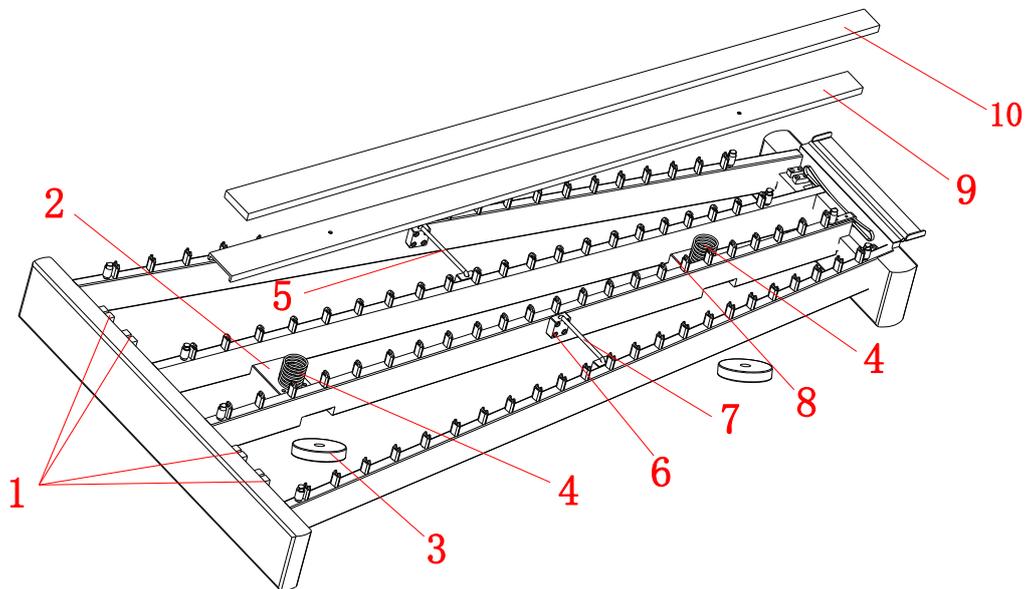

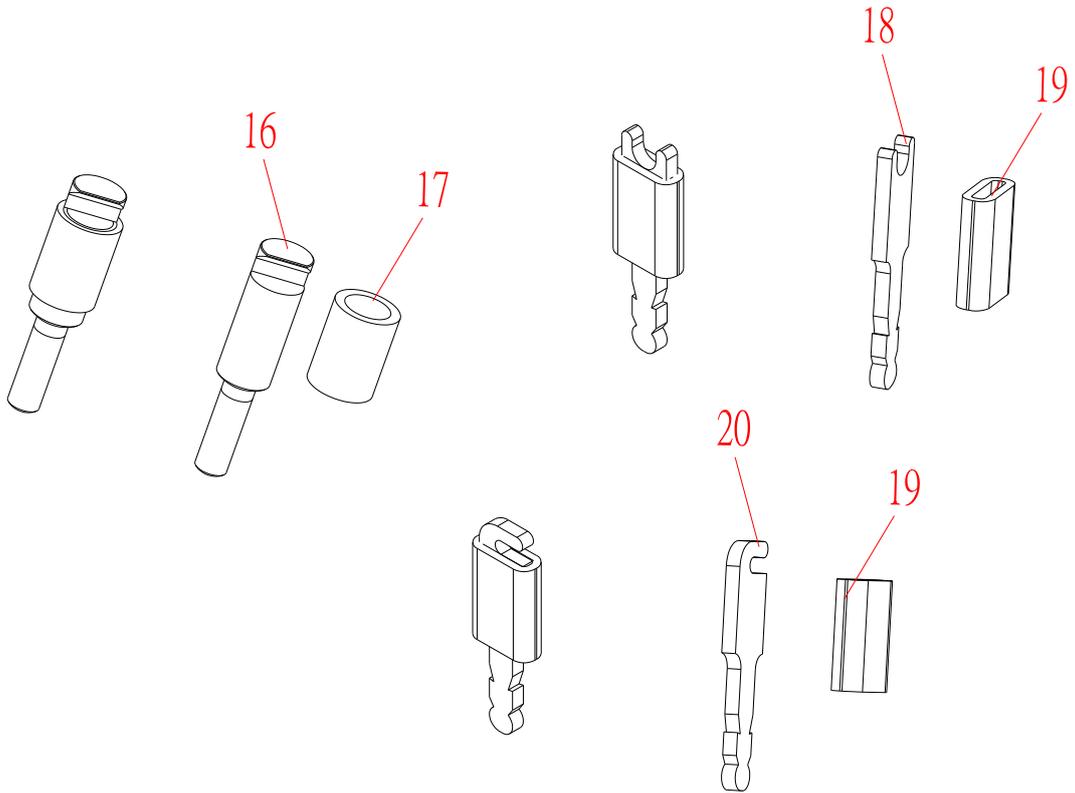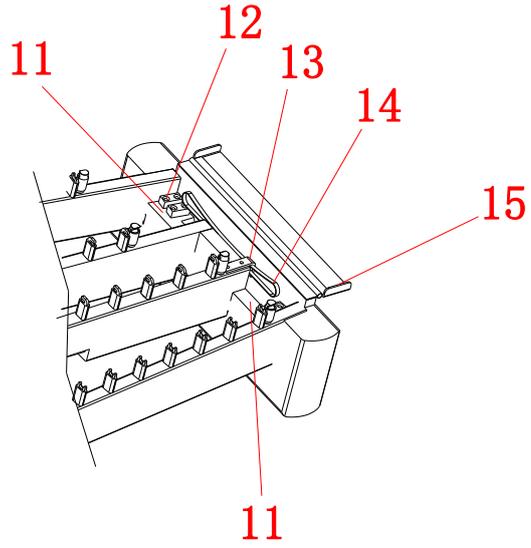





Item	Part No.	Description
1	PF415-265	Resonance holder
2	PFV7530-564LB	Spring Socket
3	PF704-575	Nut
4	PF704-563	Spring
5	PFV7530-139B	Bracket
6	PFM6543-141	U Bracket Notch
7	PFV7530-140B	Bracket
8	PFV7530-564HB	Spring Socket
9	PF7530-780	U -groove
10	PFV7530-786	Felt
11	PMP26-703	Felt
12	PFV6530-268	Fixed block
13	PF704-783	Bracket

14	PMV7530-257A	Belt
15	PF704-047A	Cover
16	PF450-533	Tone Bar Post (I Type)
17	PF450-301	Insulation for Bar Post (I Type)
18	PF420-533Y	Tone Bar Post (Y Type)
19	PFX6535-302	TPR Bush for Bar Post
20	PF420-533P	Tone Bar Post (P Type)
21	PFV6530-319	Axis
22	PFV6530-3201	Shaft seat
23	P2402-330	Felt
24	PWS10506312	Spring Washer
25	PNW060006030	Wing Screw
26	P90SY156BY	異型螺絲 M6
27	PLV6530-207	connector
28	PSF0600085HC	Key Screw


## 4. V7530G/S Leg Assembly

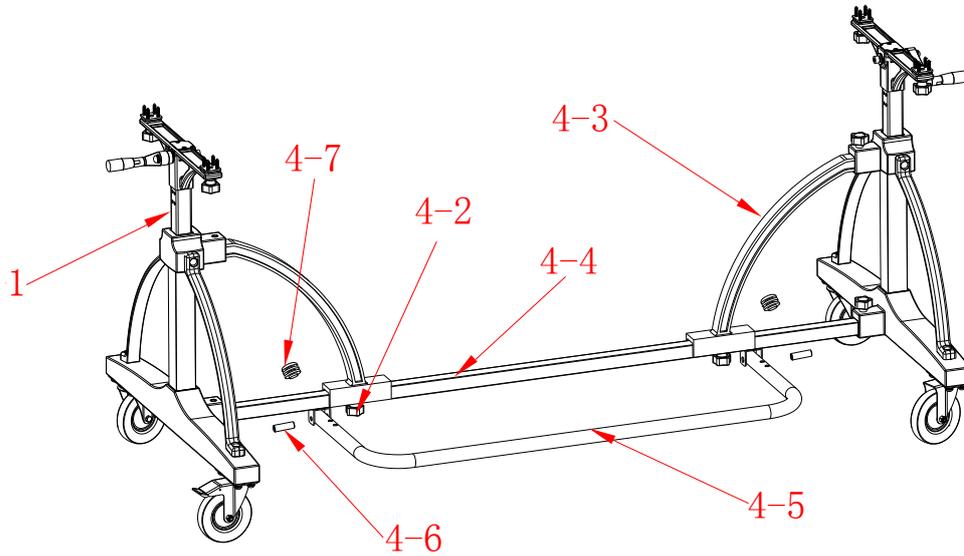


### (4-1)

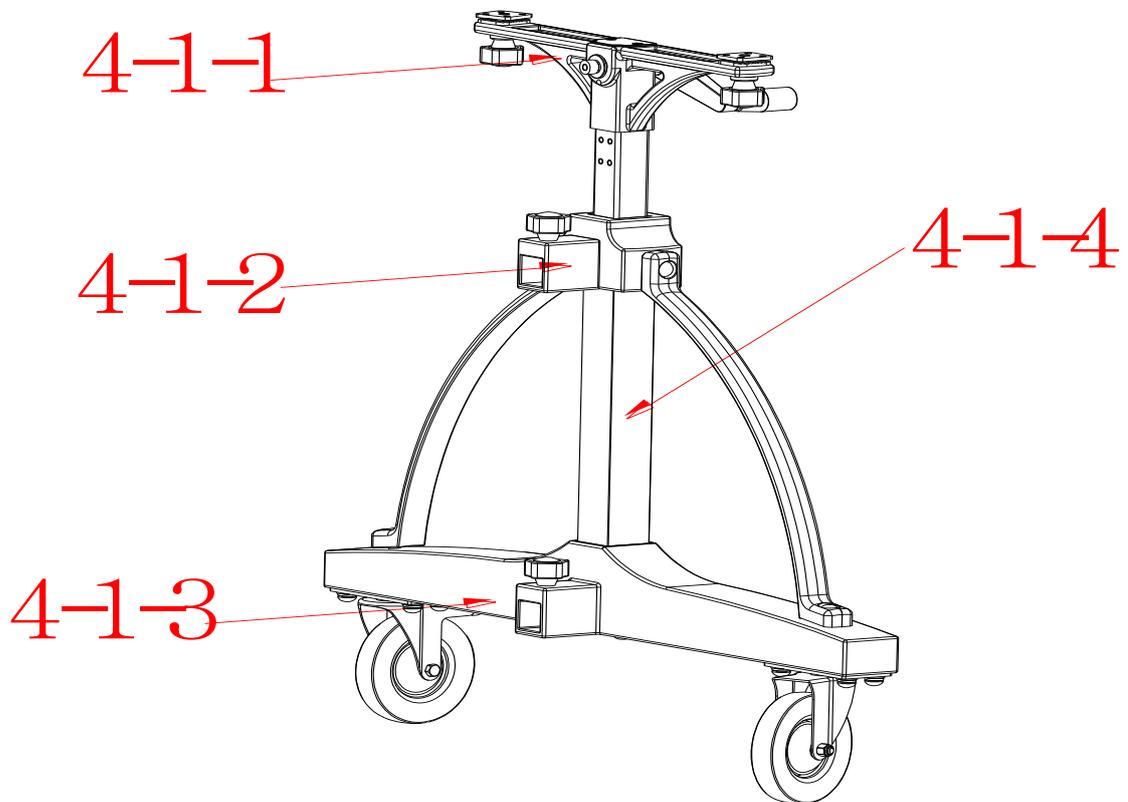


**(4-1-1)**

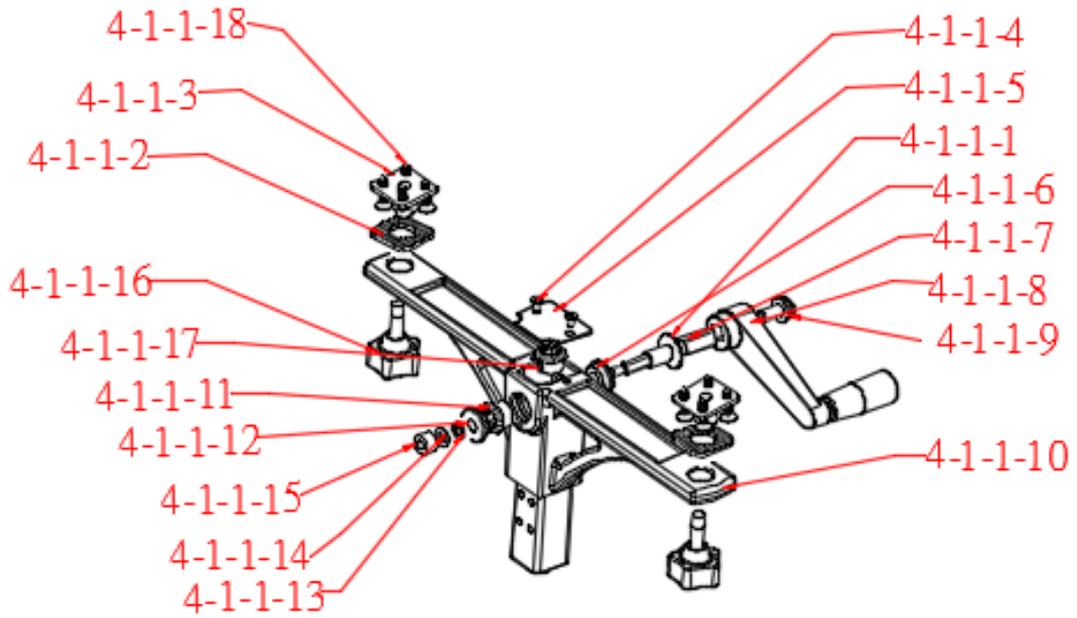


**(4-1-2)**

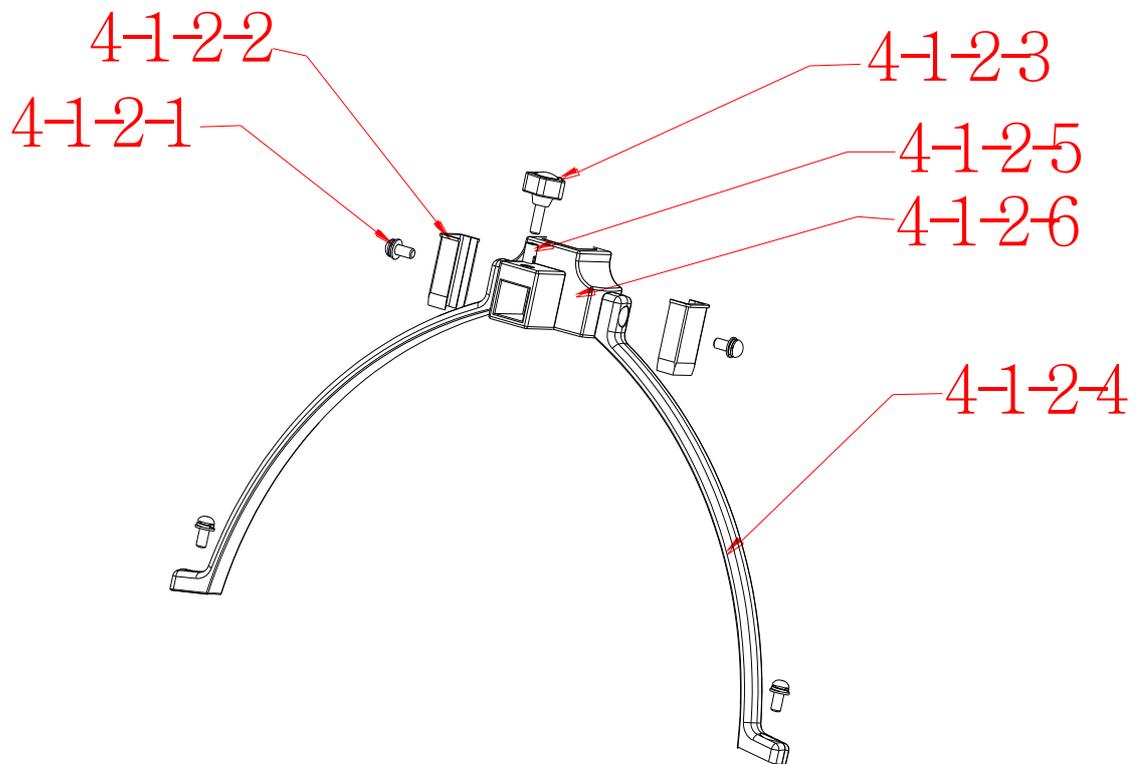

**(4-1-3)**

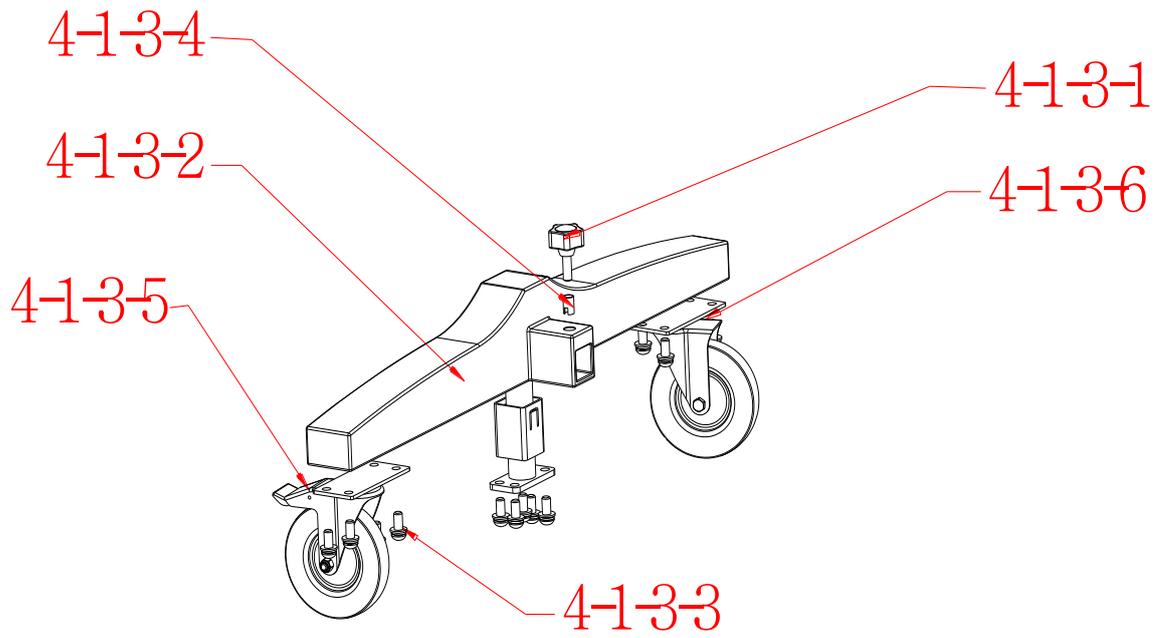

**(4-1-4)**

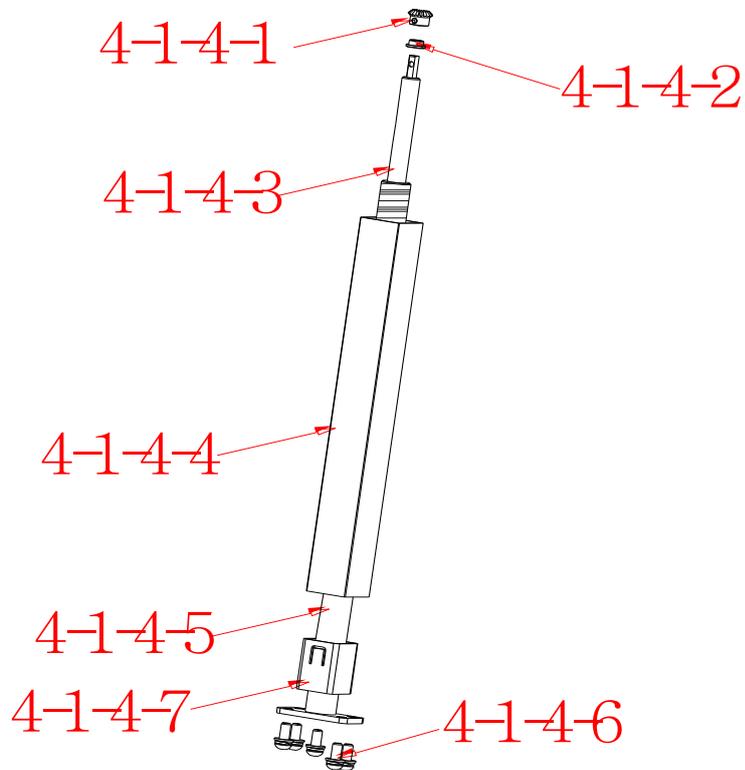

No.	Part Number	Description
<b>4--1</b>	<b>PLX6535-002A</b>	<b>Leg Assembly</b>
<b>4--1--1</b>		
4-1-1-1	PMT26-312	Nylon Ring
4-1-1-2	PLM6543-275	Rubber Pad
4-1-1-3	PLM6543-270B	Connector
4-1-1-4	PLM6543-151B	齒輪保護蓋(黑大皺紋漆)
4-1-1-5	PSD0400080	Socket Screw
4-1-1-6	PLM6543-021	Plastic Washer
4-1-1-7	PLX6535-937	Crank Handle
4-1-1-8	PLM6543-938	Handle
4-1-1-9	PSDJ0800200BA	Socket Screw
4-1-1-10	PLM6543-150B	Leg Assembly
4-1-1-11	PLM6543-325	Tooth Gear
4-1-1-12	PLM6543-022	Plastic Washer
4-1-1-13	PWS10006220B	Spring Washer
4-1-1-14	PWK12006515B	Flat Washer
4-1-1-15	PNP060005810B	Lock Nuts(M6*8H*13W)
4-1-1-16	P14L1027B	Hex Screw
4-1-1-17	PPS0500060	Pin
4-1-1-18	P90SR037BZ	Screw M4*25
<b>4--1-2</b>		
4-1-2-1	PSDJ0800200BA	Socket Screw
4-1-2-2	PLM6543-070	Bush
4-1-2-3	P13L1007B	Hex Screw(M8X40L)
4-1-2-4	PLM6543-655B	Support
4-1-2-5	PL470-301	Bush
4-1-2-6	PLM6543-055B	Housing
<b>4--1-3</b>		
4-1-3-1	PFC0800300	Hex Screw(M8X30L)
4-1-3-2	PLM6543-001B	Bass
4-1-3-3	PSDJ0800200BA	Socket Screw
4-1-3-4	PL470-301	Bush
4-1-3-5	PL6543-252	4" Whell with Break
4-1-3-6	PL6543-251	4" Whell
<b>4--1-4</b>		
4-1-4-1	PLM6543-325	Tooth Gear
4-1-4-2	PLM6543-020	Plastic Washer
4-1-4-3	PLX6535-120	Screw

4-1-4-4	PLM6543-050B	Lower Section
4-1-4-5	PLX6535-088A	Rod
4-1-4-6	PSDJ0800200BA	Socket Screw
4-1-4-7	PLM6543-071	Bush
4-2	P13L1007B	五角旋鈕(M8*40L)
4-3	PLM6543-024B	Leg Support
4-4	PLV6530-635BH1	Cross Rail
4-5	PLV7530-202BH	Damper Control tube
4-6	PLV6530-089	Casing
4-7	PE015-601	Plugs